


Plugging in Your Remote 53xx Series IP Phone Using a Power Brick

1. Plug your Power Transformer in to the wall which will provide power to your Remote IP Phone

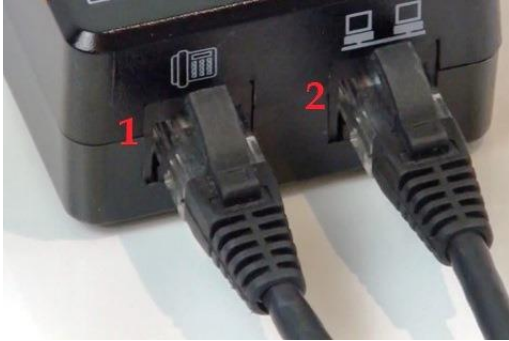

- a. Plug a Data Cable into your Internet Router and into location 2 of the Power Transformer
- b. Plug the other Data Cable into location 1 on your Power Transformer

2. Plug the Data Cable from location 1 on your Power Transformer into the back of the phone.

